



# Acer Iconia B1-711 Back Cover Replacement

Acer Iconia B1-711 Back Cover Replacement

Written By: ZFix



## INTRODUCTION

How to remove the Back / Rear cover to replace it.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/8-djJ2aXa60>]

---

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- Switch-off the tablet.
  - Remove any SIM and/or Memory Card.
  - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

## Step 2



⚠ Before doing anything, disconnect the battery.

★ [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:14:56 AM.